




Woodworking machinery at its best!


W650 Table Saw Blade Alignment Instructions

- 1) Disconnect the saw from the power supply and remove the blue panel from side of the saw base.
- 2) Loosen, but do not fully undo, the four M8 hex cap head bolts under the front and rear of the cast table using a 6mm hex key.

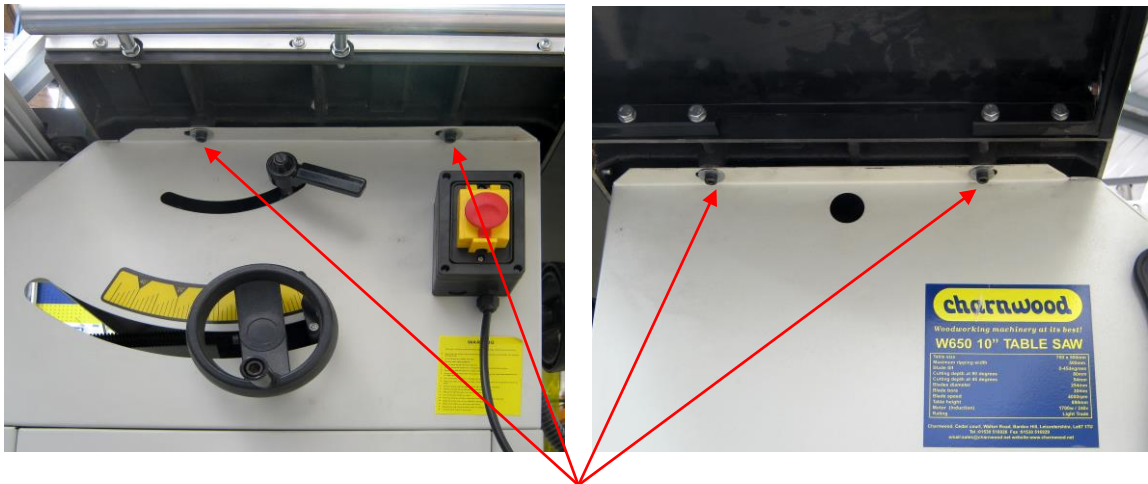



M8 Hex Cap Screws

- 3) Similarly, loosen the two M6 hex cap head bolts accessed through the side of the base under the sliding table, using a 5mm hex key.

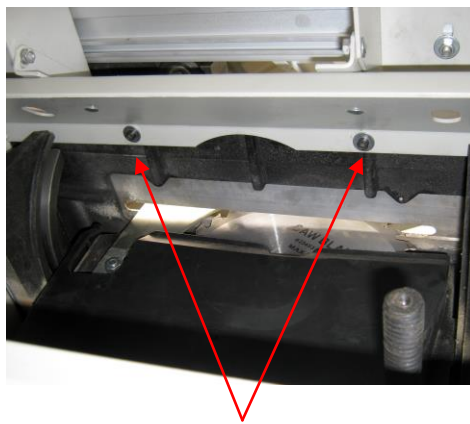

M6 Cap Head Screws

- 4) Adjust the alignment of the sawblade in the table insert slot by moving the cast iron table over the base.
- 5) Measure the distance between the blade and the T slot in the table at both the front and rear of the blade, ensuring that both measurements are the same. Also, ensure that the blade will clear the table and insert when tilted to 45 degrees.

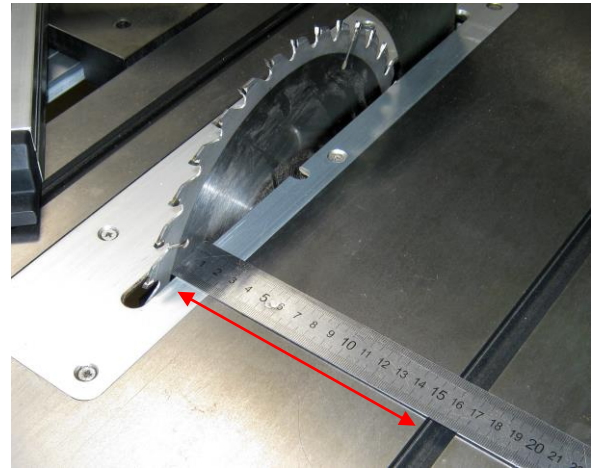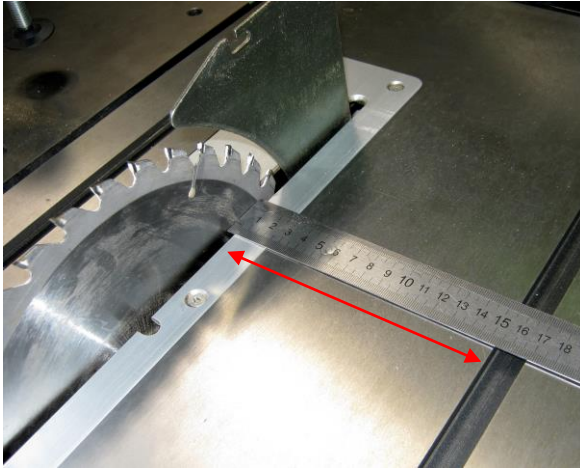

- 6) When you are satisfied the blade is aligned, re-tighten the six bolts and replace the side panel prior to use.

Tel. 01530 516926 Fax. 01530 516929 email: sales@charnwood.net

Website: www.charnwood.net

Charnwood, Cedar Court, Walker Road, Bardon, Leicestershire, LE67 TU, England